


## Control Engineering

# CE111

## PLC Process

**Compact, self-contained, bench-mounting liquid flow and level process, for use with TecEquipment's CE123 PLC Trainer**

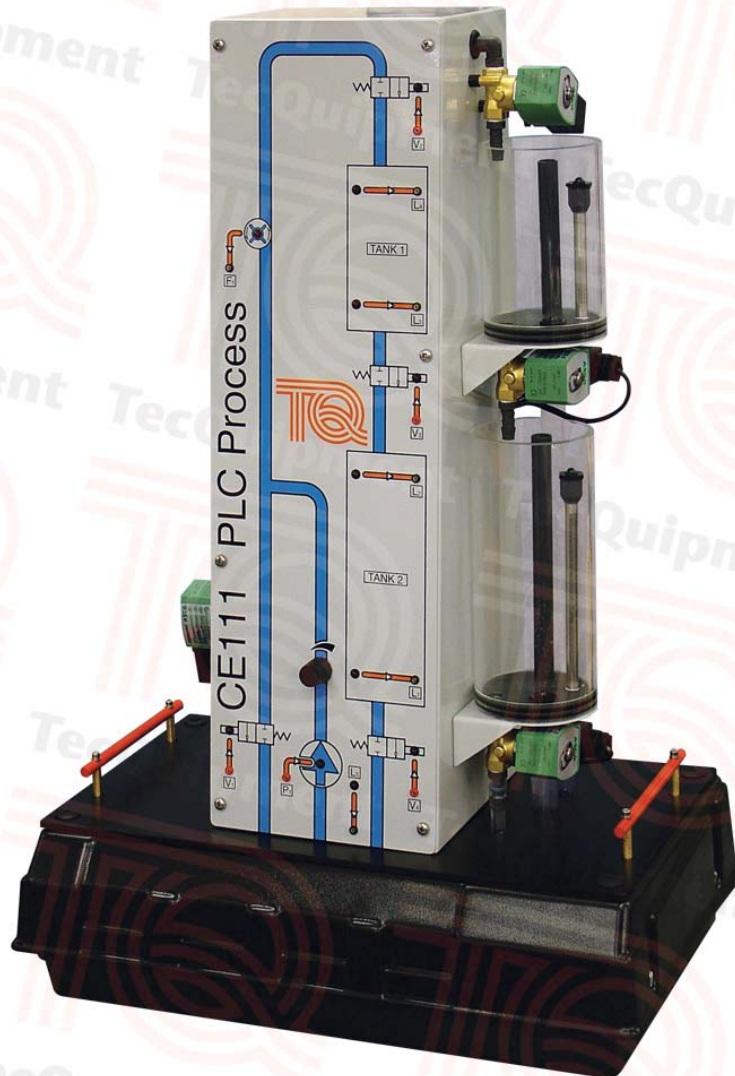

- Compact, bench-mounting unit
- Connects to TecEquipment's PLC Trainer (CE123) to mimic a realistic industrial process
- Allows basic and advanced studies of programmable logic controllers (PLCs) in industrial applications
- Shows control of liquid flow, volume and level in two tanks
- Includes a selection of fully controllable valves to give many different liquid level and flow control experiments, including batch processing
- Front panel includes mimic diagram of the process so students can clearly see what they are controlling

- TecEquipment Ltd, Bonsall Street, Long Eaton, Nottingham NG10 2AN, UK
- **T** +44 115 972 2611 • **F** +44 115 973 1520 • **E** info@tecquipment.com • **W** www.tecquipment.com
- An ISO 9001 certified company

# CE111

# PLC Process

## Description

TecEquipment's PLC Process gives students and engineers practical experience of the principles and application of programmable logic controllers (PLCs). The object is to connect and program an external, programmable logic controller to monitor and control the level and flow rate of water in a two-tank system.

The apparatus has two transparent tanks, mounted one above the other. A variable-speed pump transfers water from the reservoir (in the base of the unit) into the upper tank. The water can drain down to the lower tank and then back into the reservoir. Solenoid valves may be individually opened or closed to control and redirect the movement of the water. The pump control is on or off, but a manual control allows the user to set the speed. A float switch in the reservoir monitors the level of water.

Each tank includes two level sensors which measure maximum and minimum water levels. An in-line flow sensor provides a pulsed output. Its frequency is proportional to the flow rate and the number of pulses proportional to volume.

Indicators next to each input and output socket show the on/off status of the pump, the valves, the maximum and minimum level in each tank, and the flow rate.

An overflow in each tank prevents accidental overfilling.

**Note:** You must use the PLC Process with TecEquipment's PLC Trainer (CE123). A multi-way lead connects the unit to the trainer. This lead carries the power for the pump and valve solenoids, and completes the return path for the input and output sockets. Refer to separate datasheet for details of the PLC Trainer (CE123).

## Standard Features

- Supplied with comprehensive user guide
- Five-year warranty
- Made in accordance with the latest European Union directives

## Essential Ancillaries

- PLC Trainer (CE123) – An industrial-standard PLC in a compact case with buffered connections for educational use. Includes programming software for use with a suitable computer (not included).

## Experiments

When used with the CE123:

- Basic programming of a PLC
- Basic level control
- Tank filling sequence
- Simulated batch processing (sequencing)
- Ladder logic programming
- Editing and adding comments in a PLC program

The open structure of the CE111 and CE123 allows the user to create additional experiments to suit their needs.

## Essential Services

*Electrical supply:*

(Supplied from PLC Trainer CE123)

*Bench space needed:*

1600 mm x 600 mm (with the CE123)

The CE111 needs 900 mm of height clearance

## Operating Conditions

*Operating environment:*

Laboratory

*Storage temperature range:*

-25°C to +55°C (packed)

*Operating temperature range:*

+5°C to +40°C

*Operating relative humidity range:*

80% at temperatures < 31°C decreasing linearly to 50% at 40°C

## Sound Levels

Less than 70 dB(A)

## Specifications

*Nett dimensions and weight:*

560 mm x 330 mm x 810 mm, 25 kg

*Packed dimensions and weight:*

0.92 m<sup>3</sup>, 74 kg (approx – packed for export)

*Inputs:*

- 4 off solenoid type valves
- Pump on

*Outputs:*

- Reservoir level
- Tank 1 maximum and minimum level
- Tank 2 maximum and minimum level
- Flow

*Other controls:*

Manual control of pump speed

- TecEquipment Ltd, Bonsall Street, Long Eaton, Nottingham NG10 2AN, UK
- **T** +44 115 972 2611 • **F** +44 115 973 1520 • **E** info@tecquipment.com • **W** www.tecquipment.com
- An ISO 9001 certified company



*tradition.*

*innovation.*

*integration.*

**infoWERK** is a leading expert in the development of eLearning courseware, learning system solutions, teaching and AV equipment.

**Furthermore infoWERK is the representative and system integrator of "TecQuipment".**

**TecQuipment** is one of the global leaders in technical teaching equipment for engineering. If you are interested in one of TecQuipment's products feel free to contact us at:



**infoWERK Medien & Technik GmbH**

**Martinsbühel 6 / A-6170 Zirl / Austria**

Phone: +43 (0) 5238 52099-0 / Fax: +43 (0) 5238 52099-40

E-Mail: [info@infowerk.at](mailto:info@infowerk.at) / Website: [infowerk.at](http://infowerk.at)

**Otto-Dürr-Straße 25**

**D-70435 Stuttgart, Zuffenhausen/ Germany**

Phone: +49 (0) 711 342471-0 / Fax: +49 (0) 711 342471-11

E-Mail: [info@de.infowerk.at](mailto:info@de.infowerk.at) / Website: [infowerk.at](http://infowerk.at)